

MG TF - HANDBRAKE GRIP - FITTING INSTRUCTIONS



BRIGHT HANDBRAKE GRIP

Installation operation number: 70.35.90


Parts list

Ensure all parts listed are available before commencing fitment of the accessory.

Component	Part No.
Handbrake Grip Kit	SNE000070MWJ


Installation

WARNING: During the installation of this accessory the factory fit handbrake grip will be permanently damaged.

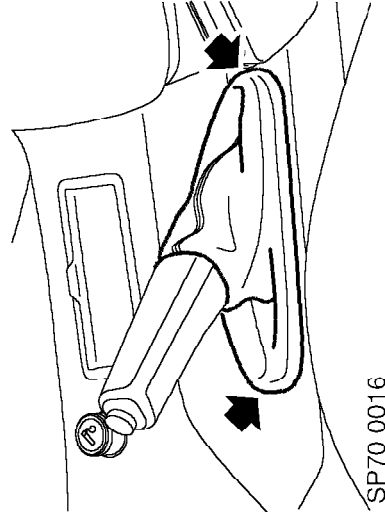


SP70 0016

1. Release 2 clips securing handbrake gaiter to centre console.

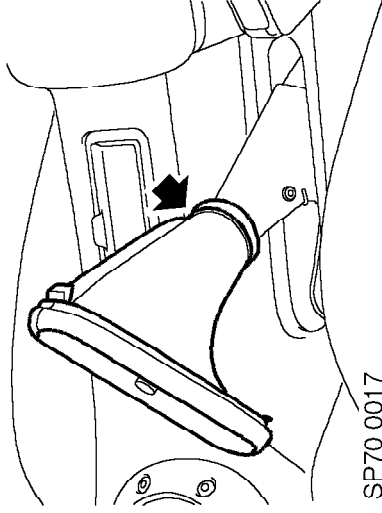

SP70 0017

2. Release 'O' ring securing gaiter to handbrake lever and remove gaiter.

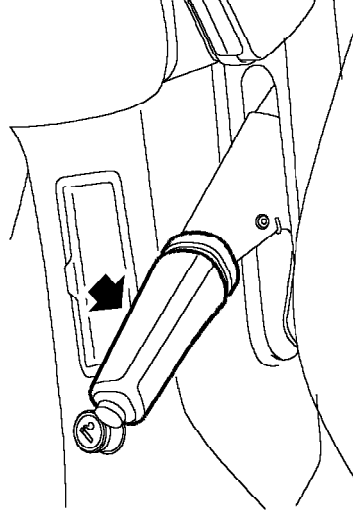


SP70 0018

3. Using suitable pliers, twist off the existing grip and discard. Remove and discard 'O' ring.

NOTE: The grip will be permanently damaged during this process.


4. Apply glue in three straight lines down the length of the handbrake lever. DO NOT apply glue to the inside of the grip.
5. Slide the grip over the handbrake lever in a twisting motion until it is in the correct position.

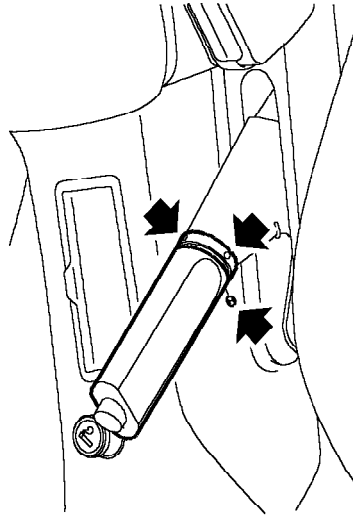

SP70 0019

6. Apply 'thread lock' to the 3 grub screws. Position the 3 grub screws to the grip and tighten to approximately 2 Nm.
7. Operate the handbrake button several times, then wipe away any excess glue with a damp cloth. Ensure the button actuation is not inhibited.

MG TF - HANDBRAKE GRIP - FITTING INSTRUCTIONS

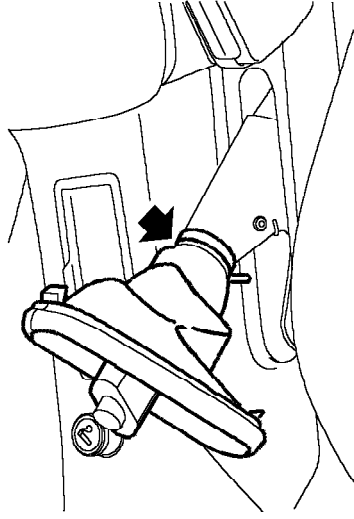

SP70 0020

8. Position gaiter over the handbrake grip. Secure gaiter to groove in grip using cable tie.
NOTE: Ensure gaiter is correct around.
9. Fit gaiter over grip into position and secure clips to centre console.
10. Allow a at least 4 hours for adhesive to set before further operation of the handbrake.